

HORIPAD

for Nintendo Switch™

Instruction Manual

Thank you for purchasing this product. Before using this product please read the instructions carefully. After reading the instruction sheet, please keep it with you for reference.



Make sure that your Nintendo Switch™ is updated with the latest system software.

• Caution	2
• Included	2
• Platform	2
• Layout	3
• How to connect	3
• How to use the Turbo Functions	4
• How to change Turbo Speed	4
• Change Control Pad function	5
• Warranty	5

Caution



Warning. Not suitable for children under 36 months. Small parts.

Please read carefully before using this product.
Keep this product away from children.
Do not drop or throw this controller.
Do not pull roughly or bend the cable of the controller.
Keep the controller away from dusty or humid areas.
If product needs cleaning, use only a soft dry cloth.
Do not use any chemical agents like benzine or thinner.

Included



Controller x 1



 
 
Instruction manual x 1

Platform

Nintendo Switch™

Not compatible with games requiring motion control.

Layout

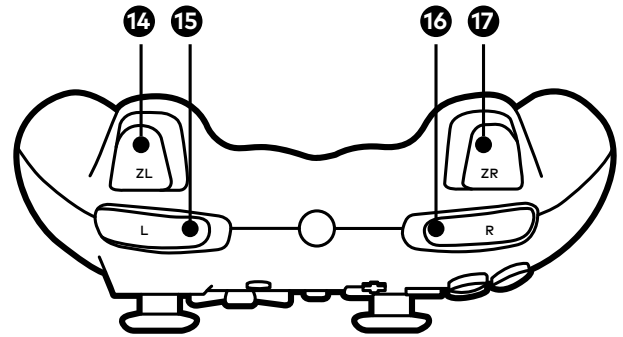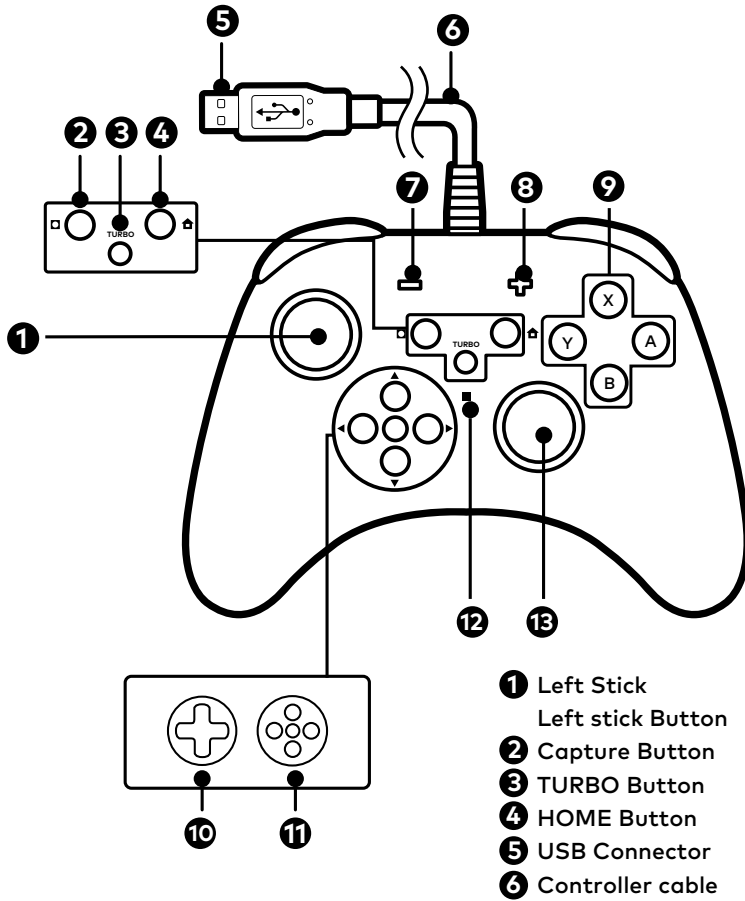


- 1 Left Stick
Left stick Button
- 2 Capture Button
- 3 TURBO Button
- 4 HOME Button
- 5 USB Connector
- 6 Controller cable

- 7 - Button
- 8 + Button
- 9 A/B/X/Y Button
- 10 Control Pad
- 11 Control Button
- 12 TURBO LED (Green)

- 13 Right Stick
Right Stick Button
- 14 ZL Button
- 15 L Button
- 16 R Button
- 17 ZR Button

How to connect

 Please insert the USB connector of the controller into the USB port of the Nintendo Switch™ Dock.



Nintendo Switch™ Dock



 







How to use the Turbo Functions

The Turbo hold function allows continuous rapid fire without having to hold the button. (Pressing the assigned button deactivates this).

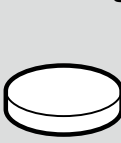 The following buttons can be set to Turbo or Turbo hold mode:

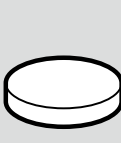A / B / X / Y / L / R / ZL / ZR / Control Pad (UP / DOWN / LEFT / RIGHT)

Control Pad (UP, DOWN, LEFT or RIGHT) are not compatible with the Turbo hold mode, and can only be set to Turbo mode.

	Setting method	Turbo Indicator
Turbo Mode	 <p>Hold down the Turbo button and then press the button that you want to set to Turbo mode.</p>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>ON</p>  <p>Blinking</p> </div> <div style="text-align: center;"> <p>OFF</p>  <p>LED light</p> </div> </div>
Turbo Hold	 <p>Press the button once more, and the button will remain in Turbo (Turbo Hold).</p>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>ON</p>  <p>LED light</p> </div> <div style="text-align: center;"> <p>OFF</p>  <p>Blinking</p> </div> </div>
Turbo OFF	 <p>Pressing the button again once more will deactivate the Turbo function.</p>	<div style="text-align: center;"> <p>OFF</p>  </div> <p>In the case that after deactivating the turbo function, the turbo Indicator LED does not turn off, this means that there is still a button set to Turbo/Turbo Hold.</p>
OFF (All buttons)	 <p>Hold the TURBO Button and press the SELECT Button</p>	<div style="text-align: center;"> <p>OFF</p>  </div> <p>If you forget which buttons you have set to Turbo mode, deactivate them all and reassign, as you require.</p>

By pressing the HOME Button, all Turbo function and Turbo hold settings will be deactivated. When returning back to game play, you will need to reset the Turbo and Turbo Hold setting.

Turbo Function may not be compatible with all software titles. Please try adjusting the Turbo settings or simply turn OFF TURBO.

How to change Turbo Speed

You can adjust the Turbo mode to 3 different speeds.

While pressing the Turbo Button, push up on the Right Analog Stick to change the Turbo speed in the following order:

 
5 times/second → 12 times/second → 20 times/second

While pressing the Turbo Button, push down on the Right Analog Stick to change the Turbo speed in the following order:




20 times/second → 12 times/second → 5 times/second

Turbo speed is set to 12 times/second by default.

The Turbo LED will flash at a rate corresponding to the Turbo speed for 2 seconds.

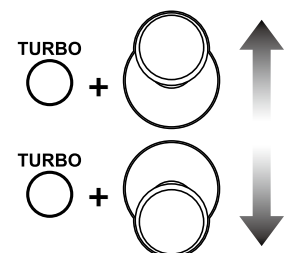

Change Control Pad function

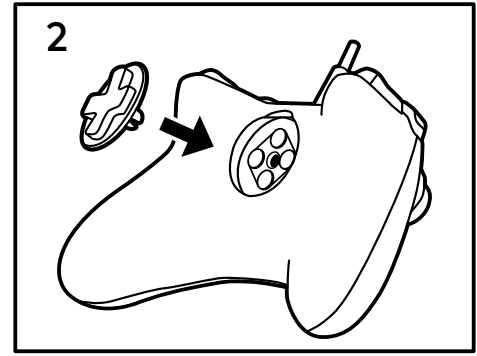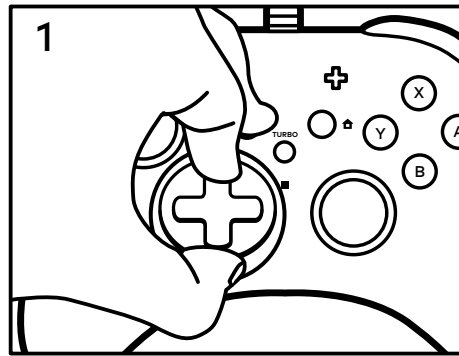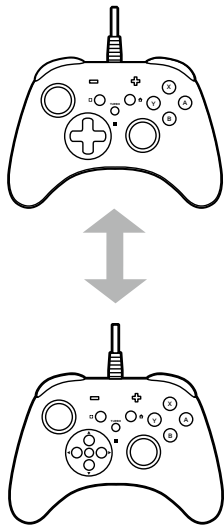   

The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.

PRODUCT DISPOSAL INFORMATION

[Bin symbol as on the right] Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe.

To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

The wires are not to be inserted into socket-outlets.

The packaging must be retained since it contains important information.



THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Warranty

HORI warrants to the original purchaser that the product purchased new in its original packaging shall be free of any defects in material and workmanship for a period of 90 days from the original date of purchase.

If the warranty claim cannot be processed through the original retailer

please address directly to HORI at infous@hori.jp. Please visit <http://stores.horiusa.com/policies/> for warranty details.

Please retain contact information for future reference.

The manufacturer reserves the right to change the product design or specifications without notice.

The image on the package may differ from the actual product.

HORI and HORI logo are registered trademarks of HORI.